





MOUNTING REFLECTOR FOR LEVEL INDICATOR



Unfasten screw in the lever on the original ball valve (to be re-used).



Dismount lever (to be re-used).



Unfasten the ball valve with the wrench (counter clock-wise).



Dismount the ball valve (not to be re-used).



Insert the new ball valve.



Fasten ball valve in container (clock-wise).



Fasten ball valve with wrench. Mounting hole for lever pointing towards operator.



Re-mount lever from the original ball valve.



